

Assembly Instructions:


- 1)- Secure the **Locking Casters** prior to securing the **Shear**. Ensure the **Gliders** are secure in the bottom of the **Shear Feet** (4pls). Remove and discard the 2x4 beams. Open the **Gate** and place the **Shear** into the **Shear Slide** as shown (Note orientation of the **Shear** to the **Dispenser**). Secure the **Handle** with the **Hardware** supplied. Secure the **Gate** as before.

~DO NOT REMOVE THE SAFETY LOCKING PIN UNTIL SHEAR IS READY TO BE USED~

Instructions for use:

- 1)- To install the rolls of **Connector** into the **Dispenser**, rotate the **Material Feed Tray** up and place 1-3 rolls as required.
- 2)- The **Tension Springs** are pre-set, but if more or less tension is required, loosen or tighten the **Adjusting Nuts** as desired.
- 3)- Insert the **Connector End** between the **Lower Rollers** and the **Adjustable Connector Straightening Roller** and push it through to the **Shear**. Pull as much as needed. Remove the **Safety Locking Pin** and pull the **Handle** down to cut.

~WHEN SHEAR IS NOT IN USE, ALWAYS INSERT THE LOCKING PIN SECURELY~

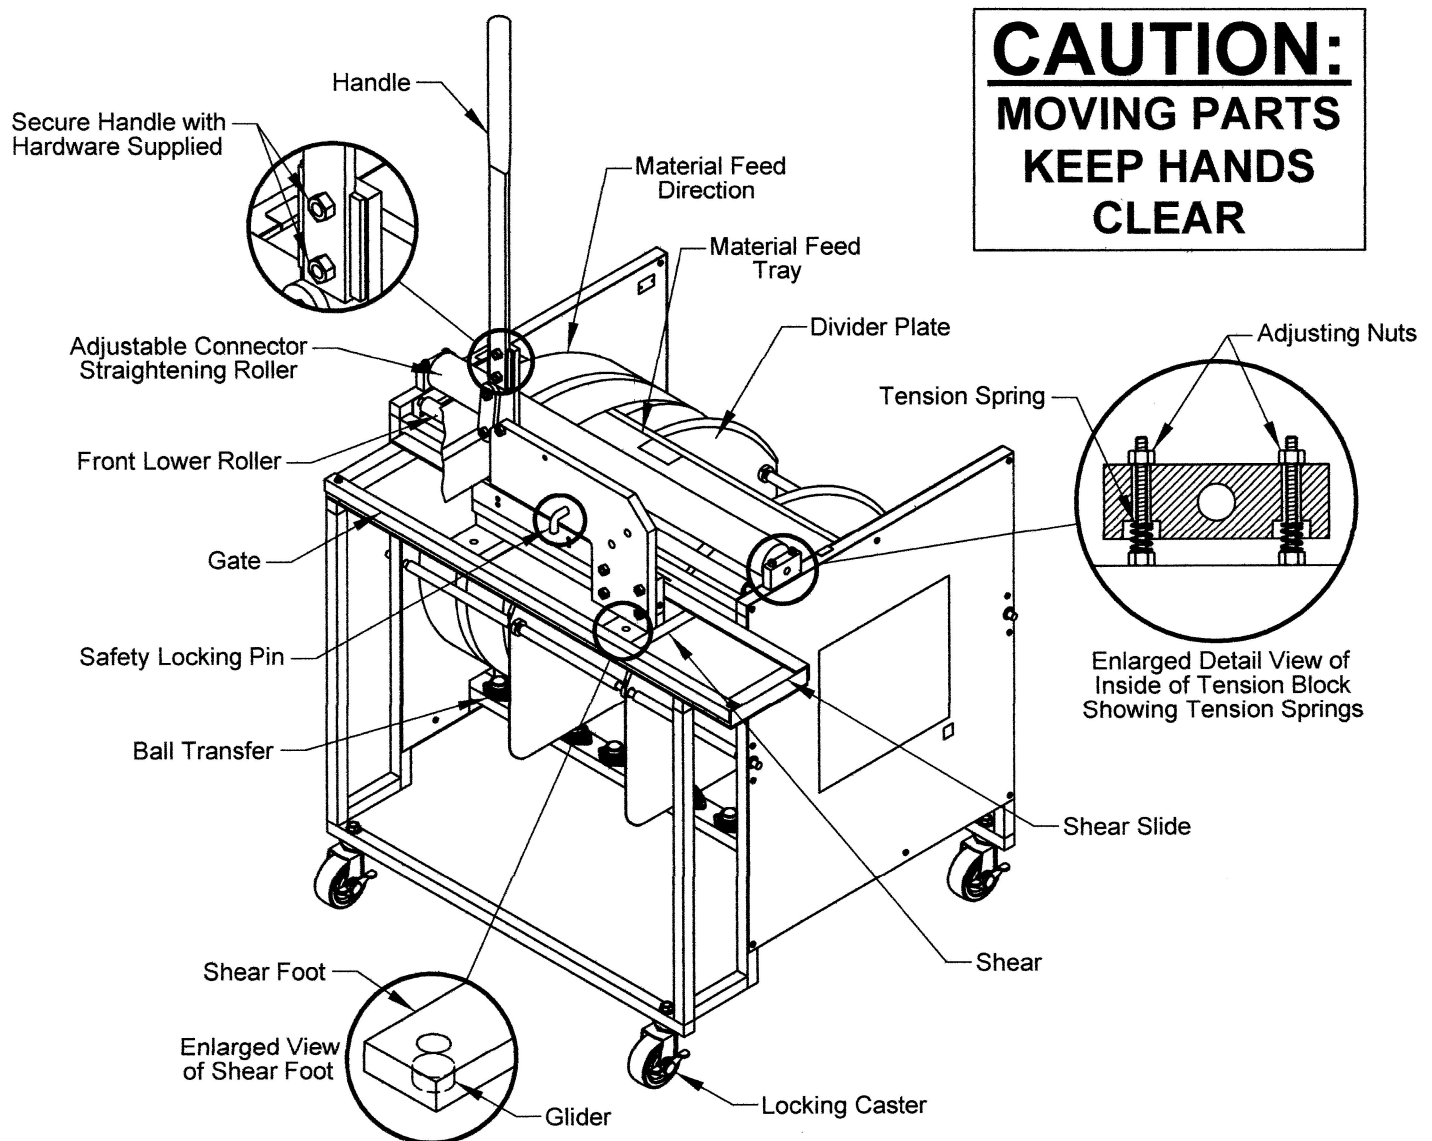

Please contact our Technical Service Department with any questions at - Ph: 631-249-9000 / Fax: 631-249-8346

THE GREATEST NAME IN SHEET METAL NECESSITIES